

electro-harmonix

HOG GUITAR SYNTHESIZER

Foot Controller

- DESCRIPTION -

Congratulations on your purchase of the Electro-Harmonix remote Foot Controller accessory that was built to be a valuable addition to the HOG GUITAR SYNTHESIZER! The HOG has so many amazing sounds and possibilities that Electro-Harmonix decided to present a means for storage of presets. The value of the HOG foot controller will be evident the first time you are in a performance situation or assembling complex sounds for recording and playing.

Important: The Electro-Harmonix Foot Controller obtains all of its power from the HOG GUITAR SYNTHESIZER. Use only a standard ¼" guitar cable to connect the Foot Controller to the HOG. A standard guitar cable has Tip and Sleeve conductors. The Foot Controller does not require batteries or an AC Adapter.

-SETUP -

To properly setup the Foot Controller with a HOG, you will need one standard guitar cable with a ¼" plug on each end:

Plug one end of the guitar cable into the HOG Guitar SYNTHESIZER Footswitch jack.

Plug the other end of the guitar cable into the Foot Controller's jack.

-STORING AND RETREIVING PRESETS –

After you have programmed the exact sound that you want on the **HOG GUITAR SYNTHESIZER**, you may then store it to by using the HOG remote foot controller.

The foot controller has 6 preset switches. Preset 1 through Preset 6. Each preset with its own footswitch.

When you are ready to store your sound, make sure that the remote is connected to the **HOG GUITAR SYNTHESIZER**. Select the preset that you want to store your program in. Depress and hold the preset switch down, the LED will blink rapidly for approximately 3 seconds. When the LED light remains lit, your preset will be stored.

Momentarily depress the switch for the Preset you want to recall and it will be loaded and ready to play.

WARRANTY INFORMATION

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at info@ehx.com or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include—with your returned unit—a written description of the problem as well as your name, address, telephone number, e-mail address, RA# and a copy of your receipt clearly showing the purchase date.

United States and Canada

EHX CUSTOMER SERVICE
ELECTRO-HARMONIX
c/o NEW SENSOR CORP.
47-50 33RD STREET
LONG ISLAND CITY, NY 11101

Tel: 718-937-8300
Email: info@ehx.com

Europe

JOHN WILLIAMS
ELECTRO-HARMONIX UK
13 CWMDONKIN TERRACE
SWANSEA SA2 0RQ
UNITED KINGDOM

Tel: +44 179 247 3258
Email: electroharmonixuk@virginmedia.com

To hear demos on all EHX pedals visit us on the web at **www.ehx.com**
Email us at **info@ehx.com**