



# SWITCHBLADE

## Channel Selector

**Congratulations! You have just purchased the Switchblade Channel Selector. The Switchblade is capable of carrying out all of your simple switching needs, without having to worry about batteries and power adaptors.**

### **-OPERATION-**

**FOOTSWITCH**— Switches the Y jack connection between the A jack and B jack.

The Switchblade can be used in two directions, meaning the signal path can flow from A/B to Y, *or* from Y to A/B.

Using the Switchblade to switch between two instruments: plug the instruments into jack A and jack B using ¼" instrument cables. Then connect jack Y to the next device in your signal chain (effects, if any, or amplifier if none). Use the footswitch to switch between the instruments.

Using the Switchblade to switch between two amplifiers: plug the amplifiers into jack A and jack B using ¼" instrument cables. Then connect jack Y to the previous device in your signal chain (effects, if any, or instrument if none). Use the footswitch to switch between amplifiers.

The Switchblade is not limited the above two applications. Here are two more application examples:

Y: Instrument→ Effects chain A, effects chain B

Y: Amplifier head→ Speaker cabinet A, speaker cabinet B (be sure to use *speaker* cable and not instrument cable for this application).

The Switchblade is a passive device and requires no power supply, such as a battery or power adapter. The Switchblade does not support stereo use and will only work with ¼" mono cables.

## - WARRANTY INFORMATION -

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at [info@ehx.com](mailto:info@ehx.com) or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include with your returned unit: a written description of the problem as well as your name, address, telephone number, e-mail address, and RA#; and a copy of your receipt clearly showing the purchase date.

### **United States & Canada**

EHX CUSTOMER SERVICE  
ELECTRO-HARMONIX  
c/o NEW SENSOR CORP.  
47-50 33RD STREET  
LONG ISLAND CITY, NY 11101  
Tel: 718-937-8300  
Email: [info@ehx.com](mailto:info@ehx.com)

### **Europe**

JOHN WILLIAMS  
ELECTRO-HARMONIX UK  
13 CWMDONKIN TERRACE  
SWANSEA SA2 0RQ  
UNITED KINGDOM  
Tel: +44 179 247 3258  
Email: [electroharmonixuk@virginmedia.com](mailto:electroharmonixuk@virginmedia.com)

This warranty gives a purchaser specific legal rights. A purchaser may have even greater rights depending upon the laws of the jurisdiction within which the product was purchased.

To hear demos on all EHX pedals visit us on the web at [www.ehx.com](http://www.ehx.com)  
Email us at [info@ehx.com](mailto:info@ehx.com)

## **FCC COMPLIANCE**

*Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

*Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment under FCC rules.*



